


# PLUNGE ROUTER OF-1500 VS

No.:001539 230 V  
No.:002307 127 V

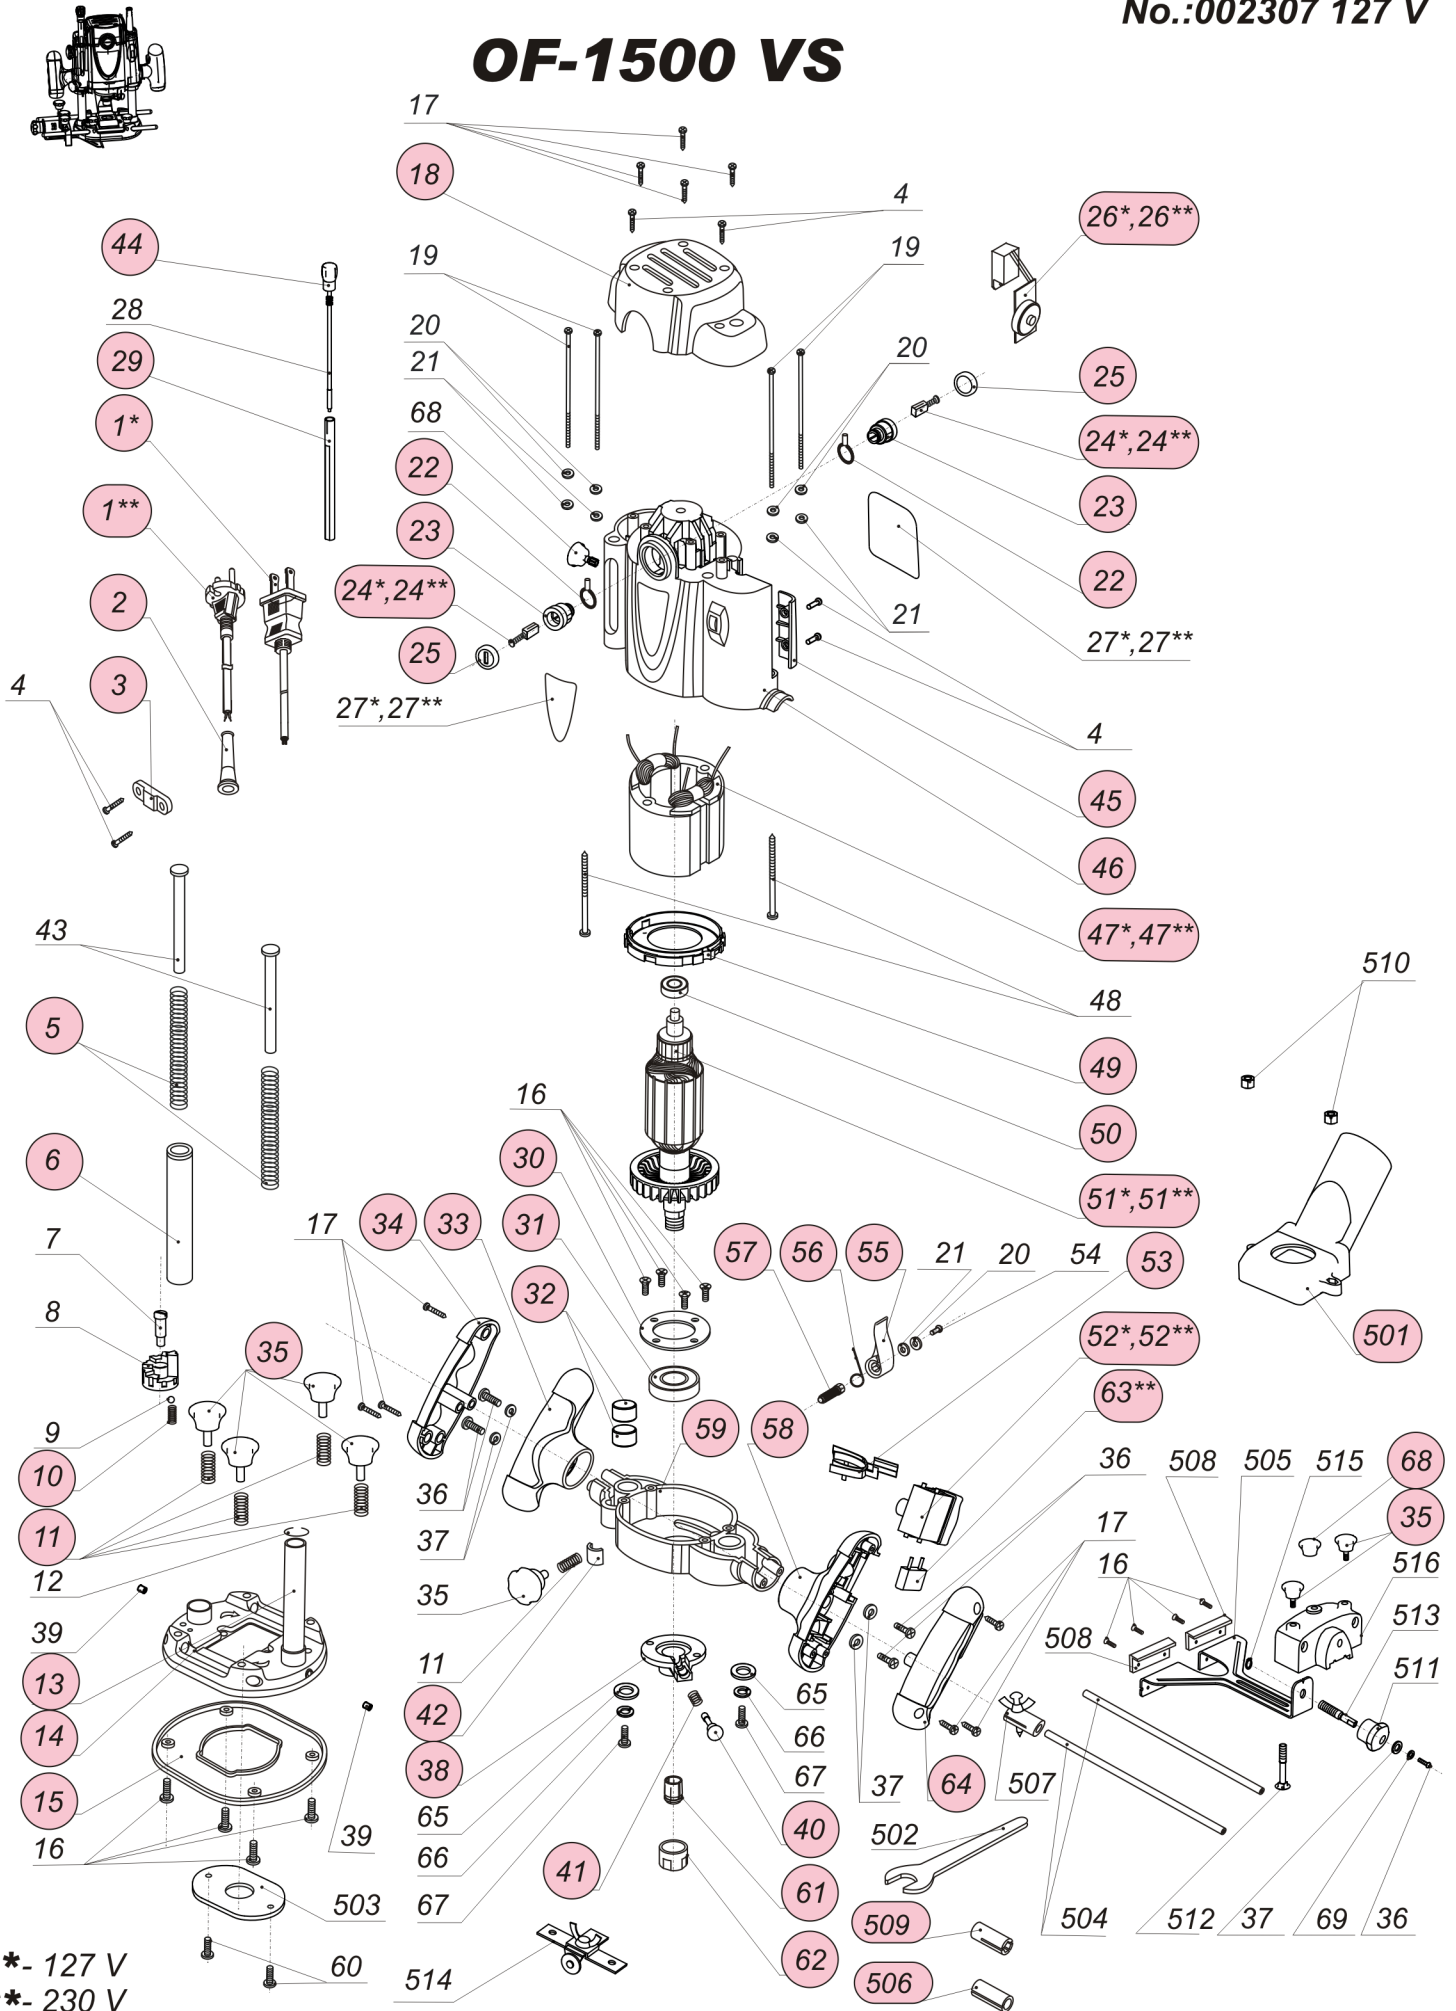

\*- 127 V  
\*\*- 230 V

**DWT**AUG.2004  
DIYPLUNGE ROUTER  
OF-1500 VSModel No.: 001539 - 230 V  
002307 - 127 V**PRICE LIST OF SPARE PARTS**

<b>Pos.</b>	<b>Part Number</b>	<b>Description (Q-ty)</b>	<b>Description National Language (Q-ty)</b>	<b>Price, USD</b>
1*	C1-0933/01	Cord 127V		
1**	B1-0933/01	Cord 230V		
2	A1-0081/61	Cord sleeve		
3	A1-0081/54	Cord clip		
4	A1-2085/21	Screw ST4x14 (6)		
5	A1-2084/16	Spring 13.5x270 (2)		
6	A1-0582/50	Steel pipe Ø 20x150		
7	A1-0581/52	Screw		
8	A1-0581/53	Depth stop guide		
9	A1-2084/28	Steel ball Ø 5		
10	A1-2084/07	Spring Ø 8x15		
11	A1-2084/11	Spring Ø 9x12 (5)		
12	A1-0582/52	Retaining ring		
13	A1-0582/53	Steel pipe Ø 20x112		
14	A1-0582/01	Base seat		
15	A1-0582/02	Plastic base board		
16	A1-2081/61	Sunk screw M4x12 (8)		
17	A1-2085/22	Screw ST4x16 (10)		
18	A1-0562/01	Rear cover		
19	A1-2081/22	Screw M4x90 (4)		
20	A1-2083/32	Spring washer Ø 4 (4)		
21	A1-2083/40	Flat washer Ø 4 (4)		
22	A1-0187/07	Connection spring Ø 17,5 (2)		
23	A1-0582/03	Brush holder (2)		
24*	C1-0963/01	Carbon brush 127V (2)		
24**	B1-0963/01	Carbon brush 230V (2)		
25	A1-0582/04	Brush cap (2)		
26*	C1-0534/01	VS wheel switch and soft start 127V		
26**	B1-0534/01	VS wheel switch and soft start 230V		
27*	A1-0582/54	Name plate 127V (2)		
27**	A1-0582/55	Name plate 230V (2)		
28	A1-0582/56	Depth gauge		
29	A1-0582/57	Depth adjusting scale		
30	A1-0582/58	Bearing cover		
31	A1-0912/01	Ball bearing 6004.RS		
32	A1-0582/05	Bush Ø 24x20x13 (2)		
33	A1-0581/06	Left handle		
34	A1-0581/07	Left handle cover		
35	A1-2084/30	Wing knob (5)		
36	A1-2081/29	Screw M5x16 (4)		
37	A1-2083/33	Spring washer Ø 5 (5)		
38	A1-0582/06	Front cover		
39	A1-2081/83	Inner hex.screw M6x12 (2)		
40	A1-0582/17	Lock button		
41	A1-0582/07	Spring Ø 8.5x12		
42	A1-0582/59	Plastic gasket		
43	A1-0582/60	Sliding pin (2)		
44	A1-0582/08	Adjusting gearing		
45	A1-0562/02	Side cover		
46	A1-0562/03	Housing		
47*	C1-0517/01	Stator 127V		
47**	B1-0517/01	Stator 230V		
48	A1-2085/38	Screw ST4x65 (2)		
49	A1-0582/09	Guide wind circle		

<b>Pos.</b>	<b>Part Number</b>	<b>Description (Q-ty)</b>	<b>Description National Language (Q-ty)</b>	<b>Price, USD</b>
50	A1-0906/01	Ball bearing 629.Z		
51*	C1-0502/01	Armature 127V		
51**	B1-0502/01	Armature 230V		
52*	C1-0531/01	Switch 127V		
52**	B1-0531/01	Switch 230V		
53	A1-0582/10	Partition		
54	A1-2081/12	Screw M4x14		
55	A1-0581/15	Lock knob		
56	A1-0581/16	Rotary spring		
57	A1-0581/17	Lock screw		
58	A1-0581/18	Right handle		
59	A1-0582/11	Head cover		
60	A1-2081/16	Screw M4x20 (2)		
61	A1-0582/12	Collet 12 mm		
62	A1-0582/13	Collet nut M20		
63**	B1-0941/02	Condenser 0.33µF 230V		
64	A1-0581/22	Right handle cover		
65	A1-2083/05	Washer Ø6 (2)		
66	A1-2083/34	Spring washer Ø 6 (2)		
67	A1-2081/42	Screw M6x16 (2)		
68	A1-2082/27	Wing nut M6		
69	A1-2083/33	Spring washer Ø5		
501	A1-0582/14	Dust ejector		
502	A1-0582/61	Spanner		
503	A1-0582/62	Guide ring		
504	A1-0582/63	Guiding pole Ø 10x380 (2)		
505	A1-0582/64	Guiding board		
506	A1-0582/15	Collet 8mm		
507	A1-0582/71	Localizer		
508	A1-0582/65	Lining board (2)		
509	A1-0582/16	Collet 6mm		
510	A1-2082/13	Nut M4 (2)		
511	A1-0582/66	Knob		
512	A1-2081/51	Screw M8x55		
513	A1-0582/67	Screw pole		
514	A1-0582/68	Guide ring bracket		
515	A1-0582/69	Retaining ring Ø 8		
516	A1-0582/70	Slide frame		